


KAMVAS Pro 16

GT-156

- | | | |
|----|-----------------------|---|
| ② | User Manual |  |
| ②6 | Benutzerhandbuch |  |
| ④6 | Manuel d' utilisateur |  |
| ⑥6 | ユーザーマニュアル |  |
| ⑧6 | Manuale d' uso |  |
| ⑩6 | Manual de Usuario |  |



Contents

1 / Precautions	3
2 / Product Overview	4
2.1 Display Introduction	4
2.2 Product and Accessories	4
2.3 Setting up Display	6
2.4 Install Driver	7
3 / Pen Basic Operation	9
3.1 Hold the pen	9
3.2 Position the cursor	9
3.3 Click	10
3.4 Move	10
3.5 Use the side buttons	10
3.6 Pen Nib Replacement	11
4 / Using the Display	12
4.1 Power Button	12
4.2 Press Keys	12
4.3 Touch Bar	12
4.4 OSD Function	12
5 / Function Setting	13
5.1 Working Area Setting	13
5.2 Press Keys Function Setting	14
5.3 Pen Buttons Function Setting	16
5.4 Enable the Windows Ink Feature	16
5.5 Pressure Sensitivity Setting	17
5.6 Pen Pressure Testing	18
5.7 Enable the Windows Ink Feature	18
6 / Specifications	19
7 / Trouble Shooting	20
8 / After-service Contact	23

1 / Precautions



【Please read this manual carefully before using, and keep it well for future reference.】

--Before cleaning the display, please unplug the USB cable and wipe with a soft damp cloth, do not use any kind of detergents.

--Please don't place the display near water sources such as bathtub, washbasin, sinks, washing machine, damp basement, swimming pool, etc.

--Do not place the display on where is unstable or a height for children reaching easily in order to avoid danger.

--Do not place the display and digital pen close to the magnetic field.

--The grooves and holes on the back case is designed for ventilation to prevent the monitor from overheating. Please don't place the display on beds, sofas, carpets or in embedded device.

--Only power supplies shown on the nameplate can be used for the display. If you have questions about the power supply which you are using, please consult the distributor of your display.

--To protect your display, please switch off the power when it is not in use. During blackouts or not using for long time, please unplug the display from the socket.

--Make sure no foreign bodies get inside the monitor through grooves and prevent liquid from splashing on the display as to prevent short-circuit or fire.

--If the display has a breakdown, do not open the main case and try to repair it by yourself. Please ask for a service for proper repair and maintenance.

--When the following situations occur, please unplug the power adapter and you may need a service for full repair and maintenance:

- A. The power wire or plug is damaged or worn out;
- B. There is liquid splashed inside of the display;
- C. The display has fallen or the LCD is broken;
- D. When obvious abnormalities occur to the display.

--While getting the components replaced, you are supposed to guarantee that the repairman is using the substitute components specified by the manufacturer. Unauthorized component replacement might cause fire, electric shocks or other dangers.


2 / Product Overview

2.1 Display Introduction

Thanks for choosing HUION® KAMVAS® Pro 16 creative display. This is a new generation of desktop-level professional drawing display, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely paint and write, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience.

To give you a better understanding and using of your display, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Macintosh systems.


2.2 Product and Accessories



*Long press: OSD

Short press: switch function of the touch bar:


1. Zoom in/out
2. Adjust brush size
3. Scroll up/down



2.2.1 Accessories



Battery-free pen




Replacement Nibs
(inside the pen holder)




Pen Holder




Pen Nib Clip
(inside the pen holder)



3-in-1 Cable



Power Adapter



Stand




Quick Start Guide




Cleaning Cloth

2.2.2 Adjustable Stand

We designed this ergonomic adjustable stand specially for your KAMVAS display, you can adjust the angle of the display according to your usage habit, and make you feel more comfortable when painting and creating.




2.2.3 3-in-1 Cable




① USB ② HDMI ③ Power ④ Type-C

2.2.4 Plug


Please choose the right plug according to your country or region, and assemble it to the power adapter. (It may not come with all the plugs)



Assemble




Disassemble



2.3 Setting Up Display

- [1] Connect your PC and the display with 3-in-1 cable.
- [2] Plug the power adapter into the cable power connector and turn it 90° to ensure that the plug does not come off and connect the power adapter to the power source.
- [3] Turn on computer and switch on the display, the LED indicator will show the current status: Green means working normal, Orange means no signal.



2.4 Install Driver

2.4.1 OS Support

Windows 7 or later, macOS 10.12 or later.

2.4.2 Install Driver

Please download the driver from our website: www.huion.com/download

After finishing installation, you can find the driver icon "🖌" in the system tray area, which means the driver was installed successfully; when you connect the display to computer, the icon will change to color "🖌", which means the driver has already recognized the display and you can start using it now.




Notes:

- [1] Before installing, you need to uninstall other driver of similar products, including the old driver of this product.
- [2] Before installing, please close all graphics software and anti-virus software to avoid unnecessary mistake.

2.4.3 Driver Page

After the download is successful, double-click to open the driver, connect the display to your computer with attached cable.

When the connection is complete, watch for a prompt at the bottom left of the driver page that display two states "Device disconnected" or "Device connected".



3 / Pen Basic Operation

3.1 Hold the pen

Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.

Notice:



When not in use, place the pen in the pen case or on the desk. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning equipment, may also cause your computer can not enter the sleep mode.



3.2 Position the cursor


Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly.

Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.




3.3 Click

Use the pen tip to tap once on the screen to register a click. Tap to highlight or select an item on the screen and double-click to open it.



3.4 Move

Select the object, then slide the pen tip across the screen to move it.




3.5 Use the side buttons

The buttons on the pen can be set to two different customizable functions.

You can use the buttons whenever the pen tip is within 10mm of the display active area.

You do not have to touch the pen tip to the display in order to use the switch.




3.6 Pen Nib Replacement

The nib will be worn off after using for a long time, then you need to replace a new nib.

[1] Anticlockwise rotate the pen holder to open the cover, take a new nib out.

[2] Insert the pen nib into the hole on the bottom of the holder and tilt the pen to pull out the old nib.

[3] Insert the new nib straight into the pen and push the nib slowly and firmly until it stops.



4 / Using the Display

4.1 Power Button

The power button was placed on the left side of the digital screen, you need to turn on the power switch before using.


4.2 Press Keys

There are 4 press keys on the top left side of the display, which you can modify the functions according to your own habits, thus will help to improve your work efficiency.

4.3 Touch Bar

The left side of the display is provided with a touch bar, you can slide up and down to achieve zoom function, or you can self-define the function on the driver.

4.4 OSD Function



Enter OSD Menu:

[1] Press ① "Function Button" around three seconds until the OSD menu appears and meanwhile the indicator will be on. The function of the Keys ② ③ ④ ⑤ will become OSD function.

[2] In the menu, the function of ②③④⑤ will become as the following:

② AUTO: Before entering menu, its function is "auto adjustment".

After entering menu, its function is "back to previous menu".

③ MENU: Press to call up the menu, after entering menu, its function is "confirm".

④ - : After entering menu, its function is "down/left/decrease".

⑤ +: After entering menu, its function is "up/right/increase".

Exit OSD Menu:

[3] Press ① "Function Button" again for around three seconds until the indicator will be off, the function of the Keys ②③④⑤ will become "short cuts function again".

5 / Function Setting


5.1 Working Area Setting

5.1.1 Using Multiple Monitors

Select the Working Area tab to define the relationship between pen movement on the display and cursor movement on the monitor screen.

By default the entire active area of display maps to the entire monitor. If more than one monitor is in use and you are in extended mode, you need to choose the related monitor on the driver interface which you are going to map to.

If your monitors are in mirror mode (All monitors display the same content), the display maps to the entire space on each monitor and the screen cursor is displayed on each monitor simultaneously.



5.1.2 Working Area Setting

Define the display area that will be mapped to the screen area.


[1] Full Area: the entire active area of the display. This is the default setting.

[2] Screen Ratio: As a general rule, be 16:9.

[3] Customized Area:


1> Enter coordinate values.

2> Drag the corners of the foreground graphic to select the screen area.



5.1.3 Rotate Working Area

By changing the direction of the display to adapt to the left and right hand operation. You can rotate the display by 0°, 90°, 180° or 270°.




5.2 Press Keys Function Setting

Default Setting: Place the cursor on the press key or click the press key to find the default values.


Customized Setting: Select the function to be achieved on the pop-up dialog box, then click "Apply" or "OK" to take effect.

Enable/Disable Press Keys: Check/Uncheck "Enable Press Keys".




The following shortcut key customization interface is displayed, with a total of 5 Settings.

- ① Custom: according to the use of custom or professional terms to set.
- ② Key combination function keys: Ctrl, Shift, Alt, Win+ any letter or other. Ctrl, Shift, Alt, Win, you can select one or more of them, and you can arrange them in any combination. Enter the corresponding Settings in the input box. For example: deselect -Ctrl +D, enter task manager -Ctrl+Alt+Delete, etc.
- ③ Mouse Button Function: click the box, select the required function, can be set to complete.
- ④ switch function: also click the box, select the required function.
- ⑤ Run the program function: click browse, select the connection, to achieve the required run the program function.




5.3 Pen Buttons Function Setting

Select the function to be achieved on the pop-up dialog box, then click "Apply" or "OK" to take effect.




5.4 Enable the Windows Ink feature

Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Journal, Adobe Photoshop CC, SketchBook 6 and so on.



5.5 Pressure Sensitivity Setting

The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more pressure sensitive.




Drag upward (left): the pressure change is more obvious, small pressure produces a great pressure.

Drag down (right): pressure change is weak, a lot of pressure produces less pressure.


Click the button  at the bottom right of the Settings box to reset the pressure sensitivity to the default state.

For example: apply *N respectively the same pressure, under different pressure coefficient produced different pressure effects. According to their habit of holding the pen posture and the size of the hand for the appropriate pressure Settings.




5.6 Pen Pressure Testing

You can gradually apply pressure to the stylus on the screen to test the pressure level. Click "  " button to clear all the ink.



5.7 Enable the Windows Ink feature

Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Journal, Adobe Photoshop CC, SketchBook 6 and so on.



6 / Specifications

Model		GT-156
Screen	Panel Size	15.6 inch
	Resolution	1920 x 1080 (16:9)
	LCD Type	IPS
	Active Area	344.16 x 193.59mm
	Contrast Ratio	1000:1
	Brightness	220 cd/m2
	Response Time	25ms
	View Angle	89° /89° (H) /89° /89° (V) (Typ.) (CR > 10)
	Gamut	120% sRGB
	Display Color	16.7M (8bit)
Touch	Touch Type	Battery-Free Electromagnetic Resonance
	Resolution	5080LPI
	Pressure Level	8192
	Accuracy	±0.5 mm (Center), ±3 mm (Corner)
	Sensing Height	10mm
	Report Rate	266PPS
Pen	Model	PW507
	Dimension	163.7 x Φ14.3mm
	Buttons	Two Customized Press Key
General	Output Voltage	12V 1A
	Video Interface	USB-C
	Press Key	6 Customized Press Key
	Dimension	437.8 x 251.2 x 11.5mm
	Net Weight	1.35kg
	OS Support	Windows 7 or later, mac OS 10.12 or later

7 / Trouble Shooting

7.1 Possible Breakdowns Related to DISPLAY

Abnormal Phenomena	Possible Solutions
Power indicator does not flash	1. Make sure power is on. 2. Check the socket and power cable.
No display on the screen	1. Make sure power is on. 2. Correctly connect the cables. 3. If you connect the display with a laptop, please make sure the display is on the right display mode: extend or duplicate mode. 4. Check whether the side indicator shows green, if not, it means no signal in. Please reboot your computer or reconnect the cable. 5. Is the signal wire broken or bent? If so, please replace the signal wire.
No signal	1. Make sure the cables are well connected. 2. If you use a desktop, make sure the HDMI port is plugged into the graphic card on the tower, but not into the motherboard. 3. If you use a Windows OS computer, make sure to press "Windows+P" on keyboard, then choose Duplicate or Extend. Don't choose Computer Only or Projector Only. 4. If there is no HDMI port on your computer, you need an extra HDMI adapter. We don't recommend a USB to HDMI adapter. Also, we don't recommend a USB hub. We recommend DVI/ VGA/ Display Port/ Type-C/ Thunderbolt, etc. to HDMI adapters.
Images are blurred	Please set the display resolution with 1920 x 1880.

Abnormal Phenomena	Possible Solutions
Displays wallpaper & task bar of computer monitor only.	1. It is because you are under extended mode right now. It is a normal situation. 2. If you are not familiar with extended mode, we recommend you to use in Duplicate/Mirror mode. Windows OS: Press keyboard combination---Windows+P---then choose Duplicate Mac OS: System Preference---Displays--- Arrangement--- Check "Mirror Displays". 3. If you decide to use in Extended mode. Make sure to choose pen display as Work Area in Driver. It is usually "Display 2".
Lack of colors	Check the pins of the signal wire are not bent or fractured.
There is chromatic aberration	As the regional color temperature is different, so minor chromatic aberration is a normal phenomenon.
Images jitter or ripple images appear	It is likely that there is electric equipment nearby that brings about electronic interference.

7.2 Possible Breakdowns Related to FUNCTIONS

Abnormal Phenomena	Possible Solutions
There is no pressure in the graphics software but the cursor moves	You may have installed other display drivers or opened the drawing software when installing the driver. Please uninstall all drivers and close the drawing software, then reinstall the Huion driver. It's better to restart your computer after finishing the installation.
The pen does not work	1. Make sure you are using the pen that originally came with your display. 2. Make sure you installed the driver correctly.
Press Keys does not work	1. Make sure the Press Keys function was enabled in the driver. 2. Make sure you have correctly defined the Press Keys. 3. Check if the press lock switch is on the unlock position.
The computer can't enter sleep mode	When you are not using the display, please do not put the pen on the display surface, which will keep the computer awake.
The side button of the pen doesn't work	When pressing the side button, please make sure that the nib didn't touch the display surface and the distance between the nib and surface is within 10mm.
The side button of the pen doesn't work	Make sure the USB port is functional, if not, please change to another USB port.
The computer can't recognize the display	Check that the USB port is normal. If there is any problem, please use another USB port.

8 / After-service Contact

SHENZHEN HUION ANIMATION TECHNOLOGY CO., LTD.



+86-755-32998548



www.huion.com



www.facebook.com/huion



service@huion.com



[huion-skype](https://www.skype.com/huion)



<https://twitter.com/HuionTab>

Inhalt

1 / Vorsichtsmaßnahmen	27
2 / Produktübersicht.....	28
2.1 Einführung in das Display.....	29
2.2 Produkt und Zubehör.....	29
2.3 Einstellen des Displays.....	30
2.4 Treiber installation.....	31
3 / Grundlegende Verwendung des Stifts.....	32
3.1 Den Stift halten.....	32
3.2 ZeigerpositionierungPosition the cursor.....	33
3.3 Klicken	33
3.4 Bewegung	33
3.5 Verwendung der Seitenschalter	33
3.6 Ersetzen von Stiftspitzen.....	34
4 / Display-Featureübersicht.....	35
4.1 Ein-/Ausschalter	35
4.2 Druckschalter	35
4.3 OSD-Funktionen	36
5 / Funktionseinstellungen.....	35
5.1 Einstellungen zum Arbeitsbereich	35
5.2 Druckschalter-Funktionseinstellungen.....	35
5.3 Einstellungen für die Funktionen der Stift Tasten.....	36
5.4 Windows Ink aktivieren	36
5.5 Einstellungen zur Drucksensitivität	37
5.6 Stiftdrucktest.....	39
5.7 Exportieren und Importieren.....	40
6 / Spezifikationen	41
7 / Problemlösungen	42
8 / After-Service-Kontakt	45

1 / Vorsichtsmaßnahmen

【Bitte lesen Sie diese Anleitung vor der ersten Verwendung, und bewahren Sie es zur späteren Verwendung auf.】

--Entfernen Sie das USB-Kabel, bevor Sie das Display mit einem weichen, feuchten Tuch reinigen. Verwenden Sie keine Reinigungsmittel.

--Vermeiden Sie es, das Gerät in der Nähe von Wasserquellen wie Badewannen, Waschbecken, Spülbecken, Waschmaschinen, feuchten Kellern, Schwimmbecken usw. zu verwenden.

--Achten Sie darauf, dass das Display einen stabilen Stand hat, und platzieren Sie es außerhalb der Reichweite von Kindern.

--Platzieren Sie das Display und den digitalen Stift nicht in der Nähe von Feldern.

--Die Rillen und Öffnungen auf der Hinterseite des Geräts dienen der Belüftung und verhindern das Überhitzen des Monitors. Stellen Sie das Gerät nicht auf Betten, Sofas oder Teppiche und verwenden Sie es nicht in geschlossenen Gehäusen.

--Ausschließlich Stromnetzadapter, welche auf dem Namensschild erwähnt sind, dürfen für das Display verwendet werden. Wenn Sie Fragen über ihren Netzadapter haben, wenden Sie sich bitte an den Vertriebspartner des Geräts.

--Schalten Sie das Display zum Schutz aus, wenn Sie es nicht verwenden. Ziehen Sie im Falle eines Stromausfalls oder einer längeren Nutzung den Netzstecker.

--Stellen Sie sicher, dass keine Fremdkörper durch die Rillen in das Gerät eindringen und vermeiden Sie Wasserspritzer auf dem Display, um Kurzschlüssen und Bränden vorzubeugen.

--Im Falle eines Schadens, versuchen Sie nicht, das Gerät zu öffnen und selbst zu reparieren. Wenden Sie sich an den Kundenservice für Reparatur und Wartung.

--Wenn die folgenden Probleme auftreten, ziehen Sie den Netzstecker. Sie benötigen möglicherweise Reparaturen oder Wartung:

A. Das Stromkabel oder der Netzstecker sind beschädigt oder abgenutzt;

B. Wasser ist in das Display gelangt;

C. Das Display ist zu Boden gefallen und das LCD ist beschädigt;

D. Offensichtlich abnormale Darstellung auf dem Display.

--Wenn Komponenten ersetzt werden, stellen Sie sicher, dass ihr Servicetechniker Ersatzteile des Herstellers verwendet. Nicht autorisierte Komponenten können zu Bränden, Elektroschocks und anderen Risiken führen.