

Thank you for choosing Angler.

The Angler FB-CA lets you attach any Profoto A1, Godox V1, or Godox AD100Pro flash to your Angler FastBox. When the adapter is securely mounted, take advantage of the many accessories that are available with the FastBox such as a 40° grid, diffusers, and color gels. In addition, the adapter features a 1/4-20 socket so the adapter can be mounted on the Angler FB-PG Pistol Grip for use as a handheld unit, or on any light stand with a 5/8-inch stud.

Attaching the Flash Adapter and Flash to the FastBox

Important! If your flash has a diffuser already installed on the end of the flash head, remove the diffuser before proceeding with the instructions.

Line up the alignment dots. Insert the adapter, and rotate clockwise until it clicks in place.



Align your flash with the adapter's magnets. Seat the flash into the adapter so the flash is secure and press down on the locking button for a snug and secure fit.



Removing the Flash and Flash Adapter

Carefully pull your flash out from the adapter's magnets.



Press the Unlock button so the locking button pops up. Then carefully pull your flash out from the adapter's magnets.



Using the Adapter with the Pistol Grip

The FastBox Pistol Grip (FB-PG) is sold separately. It features a 5/8 inch receiver with twist lock for easy and fast light stand mounting, an umbrella socket, and a cold shoe for attaching additional accessories like a radio slave.

Use the pistol grip as a handheld unit.

Turn the pistol grip's locking wheel until the adapter is securely attached.



Using the Adapter with a Tripod

Attach the adapter and your flash to a tripod or light stand with a 1/4-20 screw for stand-alone use.





Profoto A1, Godox V1 / AD100Pro Mount

FB-CA

FastBox Series

INSTRUCTIONS

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.
© 2022 Gradus Group LLC. All Rights Reserved.

